



CEILING INSTALLATION

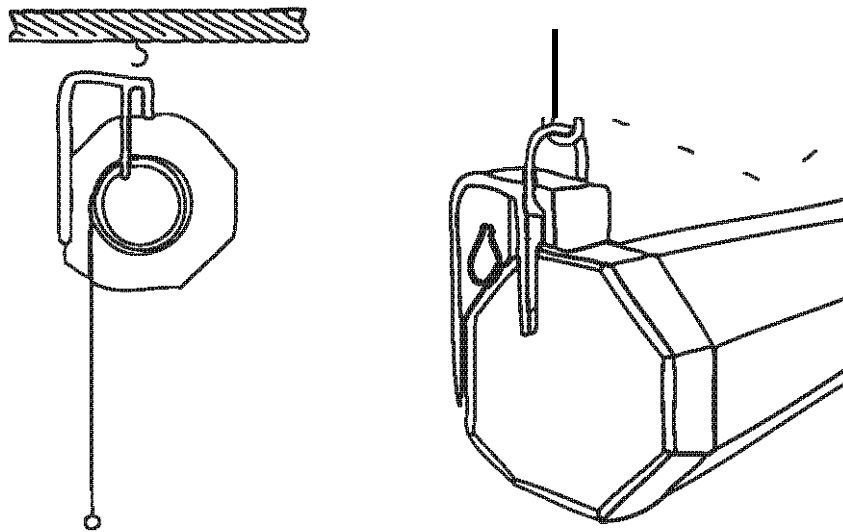

WALL INSTALLATION

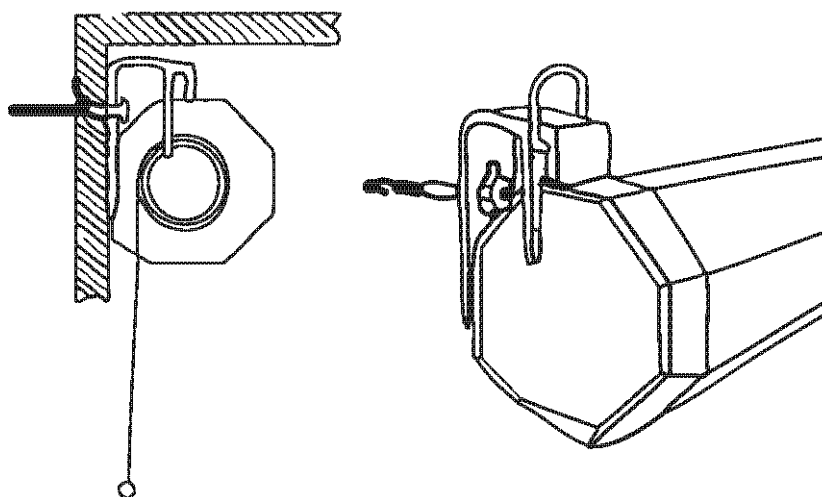

INSTRUCTION MANUAL-OPERATION

Installation instructions

Never pull the fabric off the screen before the screen is properly inserted.

Always mount the screen housing for optimum flatness of the screen fabric

Open the projector screen: Pull the hand link down, stop it in the correct position, then use the device hook: to secure the hank link.

Fold the projector screen: gently pull down to loosen the hank link, then fold up the projection screen of course.

Warning! Don't pull too hard. when you unfold or fold the projector screen.

Doing so, may damage the display mechanism.