

hotel

RC12110

Quick start guide

Full user manual can be downloaded here:

www.ruwido-consumer.com/hotel



TV brand search

1. Press and hold

 +  (3 seconds)

2. The LED flashes 2x

3. Enter the brand code:

Grundig – 1 0 0 3 2 1 7

Hitachi – 1 0 0 3 2 2 4

JVC – 1 0 0 3 1 6 8

LG – 1 0 0 3 2 2 2

Panasonic – 1 0 0 3 1 9 8

Philips – 1 0 0 3 2 2 5

Samsung – 1 0 0 3 2 2 3

Sanyo – 1 0 0 3 1 9 4

Sharp – 1 0 0 3 2 1 4

Sony – 1 0 0 3 2 1 8

Toshiba – 1 0 0 3 2 1 9

other brands – 1 0 0 1

4. The LED flashes 2x

5. Press and hold  until the TV switches off

6. Press  to save the code

note

Pressing EXIT instead of OK in step 6 quits the brand code search without saving.

The end of the code list is indicated by 5x LED flashes.